



Nissan GTR R34 & GTS R32-R33 Installation Manual

linkecu.com

G4X

Product Warranty Statement

LINK ENGINE MANAGEMENT LTD – LIMITED LIFETIME WARRANTY

All Engine Control Units (ECUs) manufactured or distributed by Link Engine Management Ltd are subject to the following LIMITED LIFETIME WARRANTIES, and no others.

Link Engine Management Ltd warrants only to the original purchaser of the ECU, for the lifetime of the ECU, (subject to the limitations set out below), that the ECU shall be free from defects of materials and workmanship in the manufacturing process. This warranty ceases to apply and does not apply to ECUs that have not been manufactured or distributed by Link Engine Management Ltd for a period of greater than one year.

An ECU claimed to be defective must be returned to the place of purchase. Link Engine Management Ltd, at its sole option, may replace the defective ECU with a comparable new ECU or repair the defective ECU.

This limited lifetime warranty is not transferable and does not apply to any ECU not properly installed or properly used by the purchaser or end user, or to any ECU damaged or impaired by external forces. The above warranties are the full extent of the warranties available on the ECU. Link Engine Management Ltd has no liability to the original purchaser or any other person for any loss, injury or damage to persons or property resulting from the use of the ECU or any failure of or defect in the ECU whether by general, special, direct, indirect, incidental, consequential, exemplary, punitive, or any other damages of any kind or nature whatsoever. Link Engine Management Ltd specifically disclaims and disavows all other warranties, express or implied, including, without limitation, all warranties of fitness for a particular purpose, warranties of description, warranties of merchantability, trade usage or warranties of trade usage.

For off-road use only, not intended for highway vehicles. This ECU contains a user-configurable software programme, which is updated by Link Engine Management Ltd from time to time. The user must ensure the current correct version of this programme is downloaded from the website of Link Engine Management Ltd and installed in the ECU prior to use. This limited lifetime warranty does not apply where the ECU has been installed with the incorrect version of the software programme. The user is solely responsible for the setup and testing of all user-configurable features.

Link Engine Management Ltd License Agreement

The software programme in this ECU is licensed not sold. Link Engine Management Ltd grants the user a license for the programme only in the country where the programme was acquired. No other rights are granted under this license and the programme may only be used on one machine at a time. If the programme is transferred a copy of this license and all other documentation must be transferred at the same time. The license may be terminated by the user at any time. Link Engine Management Ltd may terminate the licence if the user fails to comply with the terms and conditions of this license. In either event the copy of the programme must be destroyed.

Table of Contents

Part I G4X and G5 Plug-In ECU Installation Manual	6
1 Introduction	6
Safety Notice	6
Disclaimer	6
Support Options	6
2 Pre-Installation	6
Board Switch Settings	7
GTRLink	7
Injector Impedance	7
GTRLink	7
Loom Modifications	7
Nissan 300zx	7
3 Installation	8
ECU Handling Procedures	8
Fitting the ECU	8
GTRLink, GTTLink, S13Link, S15Link, 300ZLink	8
4 Additional Sensors/Functions	9
MAP Sensor	9
GTRLink	9
IAT Sensor	10
GTRLink	10
E-Throttle Output	10
GTRLink	10
Expansion Connector	10
5 PC Tuning	10
Installing USB Drivers	11
Installing PCLink Tuning Software	11
Communicating With Your ECU	11
6 Pre-Start Configuration	11
Firmware Version	11
Base Configuration	12
MAP Sensor Calibration	12
TPS Calibration	12
R34 GTR Multi Function Display Setup	12
IAT Sensor Selection	13
Input and Output Setup	13
Trigger Calibration	13
7 First Time Startup	14
8 Pinouts	15
GTRLink	16
9 CAN Information	19
GTRLink	19
10 Known Issues	20
GTRLink	20

1 G4X and G5 Plug-In ECU Installation Manual

1.1 Introduction

Thank you for purchasing your Link Plug-In Engine Control Unit (ECU), an advanced, fully programmable microprocessor controlled Engine Management System.

G4X software employ high resolution fuel and ignition tables with configurable load and RPM centres. When coupled with up to six dimensional fuel and ignition mapping, barometric pressure compensation and intake air temperature correction this gives an unprecedented level of tuning accuracy. All Link G4X ECUs are in-field upgradeable, there is no need to return the unit for software updates.

All Link G4X Plug-In Engine Management Systems are designed with flexibility and ease of installation in mind. Link Plug-In systems are designed to replace the circuit board inside the factory ECU enclosure. This provides an invisible install that requires minimal modification to vehicle wiring and ECU mounting.

Installing and tuning any after market engine management system is not to be taken lightly. G4X ECUs give the tuner the control & flexibility that only top after-market engine management systems in the world can provide. While every effort has been made to keep G4X ECUs as user friendly as possible, it should be recognised that added features bring added complexity.

The complete setup of your ECU can be divided into two important tasks:

1. This manual covers the installation of your G4X ECU. While it is not strictly essential that this work is performed by an automotive electrician, the knowledge and tools available to these professionals makes it highly recommended. Regardless of who does the installation, it is of utmost importance that instructions provided in this manual are followed exactly throughout the installation.
2. Once the G4X ECU has been installed it will need to be tuned using a laptop computer with PCLink software. Information on the configuration and tuning of the G4X ECU is detailed in the help section of PCLink. G4X ECUs are shipped pre-loaded with a base configuration that should be close enough to get most engines running after a few application specific adjustments have been made. While hearing the engine running on the new ECU for the first time is always a satisfying feeling, it is important to realise that the job is not complete. The amount of tuning performed and the experience of the tuner are the two most important factors in determining how happy you will be with your engine management system.

1.1.1 Safety Notice

Your Link Plug-In ECU is designed to enhance the performance of your vehicle. However in all cases, your vehicle must be operated in a safe manner. Do not tune your vehicle while operating it on public roads.

WARNING!

Failure to follow all installation and operating instructions may result in damage to the Link ECU, personal injury, or harm to property.

1.1.2 Disclaimer

All care has been taken to ensure the pin outs and interconnections of the ECU to the vehicles wiring harness are correct. However due to variations between vehicle models it is the installers responsibility to check wiring connections BEFORE installing the ECU. Link will not be held responsible for any damage caused by the incorrect installation of this product.

1.1.3 Support Options

Should any issues arise during installation, the following options exist for technical support:

1. PCLink help, press F1 while running PCLink
2. Contact your nearest Link dealer. A Link dealer list is available on our website.
3. Link website: www.linkecu.com with Online Discussion Forum.
4. Technical Support Email: tech@linkecu.com

The majority of questions received by the technical support team are clearly answered in the manuals. Please consult the manuals to make sure that your question has not already been answered.

1.2 Pre-Installation

Before installing the Link G4X ECU into the vehicle some pre-installation checks must be performed.



1.2.1 Board Switch Settings

Some Link G4X require switches on the board to be set before installation.

1.2.1.1 GTRLink

R34 GTR models are wired with their trigger (engine position) signals wired in opposite polarity to other models. To allow for this four dip switches have been provided on the ECU.

Set the DIP switches according to the diagram below:

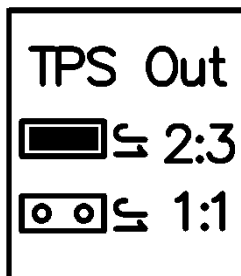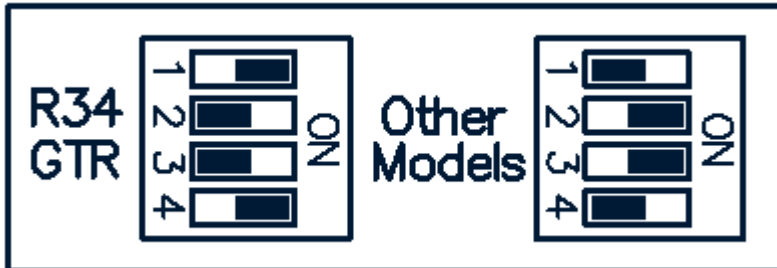

GTS-GTR ECUs that have a bottom PCB version of 1.2 onwards also have a jumper for setting the scale of TPS Out. The ECU sends the TPS signal to the Automatic Transmission Controller and 4WD Controller.

For factory manual gearbox vehicles set the jumper to the 1:1 position, for factory automatic vehicles set the jumper to the 2:3 position.

Note: The GTR uses a fuel pump speed controller that utilizes two auxiliary outputs from the ECU. See PCLink help for information on how to set this up.

1.2.2 Injector Impedance

Injector impedance is important and needs consideration before installing the ECU.

1.2.2.1 GTRLink

The G4X GTRLink Plug-In ECU is NOT designed to be used directly with low impedance injectors. GTR models are fitted with LOW impedance injectors run via factory fitted ballast resistors. This ECU has been designed to be used with HIGH impedance (greater than 6 Ohms) injectors. Ballast resistors must be wired if low impedance injectors are to be used. This means that the ECU is plug-in compatible with factory fitted injector/ballast combinations on all models. However if fitting low impedance injectors (e.g. fitting GTR injectors to a GTS) then ballast resistors must be wired. Contact your nearest Link dealer to purchase a ballast resistor pack if required.

1.2.3 Loom Modifications

1.2.3.1 Nissan 300zx

WARNING

This information is provided to assist in achieving compatibility with the JDM Nissan 300zx using the GTRLink Plug In ECU.

The installer accepts absolute responsibility for the verification of the modifications being compatible with the specified vehicle

The following modifications are required for the GTRLink Plug In ECU to be used on the JDM Nissan 300zx:

- The wire at pin 19 needs to be cut and spliced with pin 6 to run both fans off Inj8.
- For Power Steering adjustment (DI 1) at idle move the wire at pin 34 to pin 19.
- For fuel pump speed control (Aux 2) cut the wire at pin 35 and splice it into pin 104.
- If you have a wire at pin 8 cut it, as this pin is for R34 ECCS control.
- Make sure the trigger swap switch is set to 'Other Models'.

- Rewire the fuel pump relay's coil to be powered by the ignition relay.
- The 300zx firing order is 1,2,3,4,5,6 but you will need to use the firing order 1,5,3,6,2,4 as the ignition channels are connected to different pins. Note that you will need to use these two firing orders to cross reference cylinders when performing individual cylinder control.

Note: There is now a dedicated Nissan 300ZX Plug In ECU available.

1.3 Installation

This guide provides information on correctly and safely installing your new Link G4X Plug-In ECU.

1.3.1 ECU Handling Procedures

WARNING!!!

The following installation process will require handling of both the Link ECU and factory ECU. Both of these are highly sensitive to electrostatic discharge and are easily damaged. Follow the anti-static precautions given in this manual carefully to avoid damaging electronic components. Warranty claims for ECUs damaged by electrostatic discharge will NOT be accepted.

ANTI-STATIC HANDLING GUIDELINES



Your body builds up an electrical charge as you move around. This charge can reach very high voltages. Whenever given the opportunity this energy will attempt to discharge (usually through your finger tips!). This can be fatal to most electronic components. Most people have experienced an electrostatic discharge when they step out of their car or touch a metal bench top.

The following guidelines describe precautions that can be taken to reduce the possibility of damaging your ECU:

1. Work only on a conductive surface. A clean steel bench is suitable.
2. Always wear a wrist strap that is electrically connected to the conductive working surface. An Anti-static wrist strap is included for use during install
3. Touch the working surface regularly.
4. Do NOT touch components on the circuit board.
5. Where possible, only handle the ECU by its plastic header.
6. Do NOT carry the ECU around without anti-static packaging.
7. Do NOT touch the bare terminals in the ECU header.

Observing the above procedures will minimise the chance of damaging the ECU. Note that failure due to static damage often does not appear until well after it was caused.

1.3.2 Fitting the ECU

Information is provided to assist in fitting the ECU into the vehicle.

1.3.2.1 GTRLink, GTTLink, S13Link, S15Link, 300ZLink

The following steps outline the installation procedure for plug-in ECUs to suit Nissan GTS-GTR, R34 GTS, Silvia S13-S14, Silvia S14-S15, and 300ZX:

1. Remove the factory ECU from the vehicle: Ensure the key is in the OFF position. The factory ECU is located on the left side A pillar. Remove the left kick panel. Unplug the wiring harness from the factory

ECU (use a 10mm socket to unwind the connector while gently pulling on it). Remove the 6mm bolts (10mm socket) that retain the ECU and remove the ECU from the vehicle. DO NOT touch the exposed pins in the factory ECU connector.

2. Remove the factory ECUs circuit board from its enclosure: Ensure you are following the given anti-static guidelines and ARE WEARING A CONDUCTIVE WRIST STRAP connected to a conductive working surface. Remove the top and bottom covers from the ECU enclosure by removing the four corner retaining screws. Remove the circuit board by removing the retaining screws. Hold it only by the plastic header and place it aside.
3. Fit the G4X Plug-In ECU: Remove the ECU from its packaging and place it immediately in the factory enclosure. Place the factory ECU in the packaging your Link ECU came in for its protection. It may be necessary to remove the screws that retain the blue header.
4. Thread the USB tuning cable through the slot in the back of the case and plug it into the ECU. You may need to unplug it from the ECUs top board to do this. If using the internal MAP sensor (recommended for all applications requiring less than 3.0 bar of boost) run a length of vacuum hose into the enclosure and connect it to the MAP sensors pressure port. It is recommended to use a hose clamp or small cable tie on this hose.
5. Reassemble the enclosure and fit the ECU back to the vehicle.
6. Connect the ECU to the factory wiring loom. Carefully tighten the header bolt while pressing the sides of the connector into the ECU. It is a common fault for this connector to bend in the middle and make poor connection.
7. Do NOT attempt to start the vehicle. Proceed to read through the remaining sections of this manual first.

1.4 Additional Sensors/Functions

G4X Plug-In ECUs offer various options for the installation of additional sensors and devices. As a minimum it is recommended that all ECUs are installed with a Manifold Absolute Pressure (MAP) sensor and Intake Air Temperature (IAT) sensor. These parts can be purchased if required from your nearest Link dealer.

1.4.1 MAP Sensor

It is important that the pressure source for a MAP sensor be taken from a stable pressure source after the throttle body. It is common to 'T' into the fuel pressure regulators pressure signal. Do NOT share this signal with other devices such as boost gauges or blow off valves.

Note: Internal MAP Sensors on new plug-in ECUs have changed from 4Bar to 7Bar. The 7Bar versions should be identifiable by a sticker on the bottom board and can also be confirmed by comparing MAP and BAP when the MAP vacuum line isn't connected to see if they match with the calibration being used.

1.4.1.1 GTRLink

The G4X GTRLink Plug-In ECU supports several options for fitting of a MAP sensor. Any one of the following options can be used:

1. Internal MAP Sensor – To ease installation the G4X GTRLink ECU is fitted with an internal MAP sensor. This sensor is either rated to 4.0 Bar absolute pressure (3.0 bar boost) or 7.0 Bar absolute pressure (6.0 bar boost) depending on the age of the bottom board. Which sensor is fitted can be ascertained by looking at the sticker on the bottom board (should say 7 Bar for 7 Bar models and nothing for 4 Bar) or by looking at the MAP value when at atmospheric pressure and changing the calibration setting. The internal MAP sensor is wired to An Volt 1.
2. MAP Sensor Wired Through AFM – To avoid running additional wires into the engine bay, a MAP signal can be brought in through either of the AFM signal wires. The rear AFM is wired to An Volt 4 while the front AFM (GTR only) is wired to An Volt 6. Refer to factory wiring manuals for AFM wiring connections. Make sure the AFM can not be reconnected.
3. MAP Via Expansion Connector - The expansion connector provides power, ground, and analog channels for the connection of a MAP sensor.

Make sure that the correct MAP sensor input has been selected in PCLink and a MAP calibration has been performed before attempting to start the vehicle.

1.4.2 IAT Sensor

It is highly recommended that an IAT sensor be fitted in all applications to provide an input for correction of fuel and ignition based on the engines air charge temperature.

An IAT sensor should be fitted in the intake system in a location that accurately represents intake temperature. The most common location is just prior to the throttle body. Installing in the manifold is not recommended due to heat soak issues. A fast response sensor must be used in all forced induction applications.

1.4.2.1 GTRLink

The G4X GTRLink Plug-In ECU supports several options for fitting of a IAT sensor. Either of the following options can be used:

1. Factory Fitted IAT Sensor (GTR Only) – GTR models are factory fitted with an IAT sensor. This sensor is wired to An Temp 2.
2. IAT Through Expansion Connector - The expansion connector provides ground and temperature channels for the connection of an IAT sensor. Note spare An Volt channels can be used as temperature inputs when a pullup resistor (to +5V) is added.

1.4.3 E-Throttle Output

1.4.3.1 GTRLink

Bottom Board V1.8 Onwards:

Aux 9 & 10 and four An Volt pins are exposed on one of the expansion connectors and the built-in E-Throttle Relay is controlled using Aux 12.

Bottom Board Pre V1.8:

Aux 9 & 10 are not exposed on this plugin and so to use E-Throttle it is recommended to use Aux 1 & 2 (FP Speed 1 and FP Speed 2, Fuel pump setup can be changed to use a different fuel speed method) with an external E-Throttle controller.

Three Analog inputs are available on the expansion connectors which can be used to add TPS (Sub) and the APS inputs.

1.4.4 Expansion Connector

Expansion connectors are provided to allow easy connection of additional ECU inputs. An “expansion cable” can be purchased from your Link dealer.

Important points when wiring to the expansion connector:

- Do not overload the +5V Out pin. Although this is protected against ECU damage the +5V out signal also provides power for other sensors.
- Do not connect the ground pin to chassis ground. This could cause ground loops and introduce unnecessary interference. Use this pin only to ground external sensors that are isolated from chassis ground.

The Expansion connectors available for each ECU can be found under the Pinouts Section.

1.5 PC Tuning

G4X ECUs require PC/laptop tuning using the PCLink Tuning Software application running on a Windows based computer. PCLink may be downloaded from www.linkecu.com. Note that when new versions of PCLink are released they are posted on the website and may be downloaded at no cost. Also note that G4X ECUs must be used with the correct version of PCLink.

IMPORTANT!

The G4X ECU has on board USB.

BEFORE connecting the ECU to your laptop, the USB drivers must be installed. Failure to install the drivers on your laptop first may result in windows assigning incorrect drivers. These drivers will not work with the G4X ECU and are difficult to uninstall. The correct USB drivers are installed as part of PCLink installation, as described in the following section. Should internet download not be practical, a copy of the drivers on CD can be obtained from your nearest Link dealer.

1.5.1 Installing USB Drivers

Before connecting the ECU to your laptop or PC, the ECU USB drivers must be installed. These drivers are installed as part of PCLink installation as described in the following section.

1.5.2 Installing PCLink Tuning Software

Due to the frequent updates PCLink is no longer shipped with each ECU. You will be required to download the latest version of PCLink from: linkecu.com

Should access to an Internet connection be impractical, download the latest version of PCLink elsewhere to a USB drive, and then install on your laptop.

Installing from the web

1. Go to the above website and navigate to the downloads and software updates section.
2. Download the latest version of PCLink. When prompted to run or save the file, select save. It is recommended to save this file on the desktop.
3. Double click the saved file and follow on screen instructions.
4. When prompted to install USB drivers, select yes. This may take some time.
5. When installed, open PCLink by double clicking on the icon that has been placed on the desktop.

1.5.3 Communicating With Your ECU

After PCLink installation, you will be able to connect the G4X ECU to the laptop to perform set-up and tuning work.

1. Connect the ECU to your laptop using a Link G4X ECU USB Cable. If not supplied with the ECU, these can be purchased from a Link dealer. No other adapter or cabling is required. Connect the cable to the connector labelled USB.
2. If this is the first time you have connected a G4X ECU USB cable to your laptop follow the driver installation instructions that appear. When prompted if you want to install drivers select 'Continue Anyway'.
3. Start PCLink by double clicking on the PCLink icon on the windows desktop.
4. Switch the key to the ON position. This will provide power to the ECU.
5. In PCLink, under the 'Options' menu, select 'Connection'. The connection options dialogue will open. Select the correct COM Port number from the drop down list or select auto for automatic com port detection.
6. PCLink offers both mouse and keyboard control. To establish a connection between the PC and ECU press the F3 key. The same process can be used to disconnect. If a successful connection is established, PCLink will download settings from the ECU, otherwise you will be warned that an error has occurred.
7. Make sure the connection shows "ONLINE" in the top right corner of PCLink.
8. To permanently STORE any changes made to the ECU press F4. If this is not done before turning the ECUs power off all changes made will be lost.

1.6 Pre-Start Configuration

Before starting the vehicle, important pre-start configurations need to be made.

1.6.1 Firmware Version

It is recommended to ensure that the Link G4X ECU is running the most up to date firmware. Firmware version information can be obtained by connecting to the ECU with PCLink and selecting 'ECU Information' under the Help menu.

The latest firmware can be downloaded from our website with PCLink.

It is recommended that this is performed by an experienced Link dealer as new features may need to be properly configured.

The firmware can be updated by selecting 'Update Firmware' under the 'ECU Controls' menu in PCLink, follow the on screen instructions to complete the firmware update process.

1.6.2 Base Configuration

All G4X Plug-In ECUs are shipped with base configuration settings. Note that these are provided to reduce initial setup and tuning times. They are NOT recommended tuning values. PCLink includes base configurations for various models. Download the appropriate base configuration into your ECU with PCLink by connecting to the ECU (described in the Connecting To PCLink section of this manual), then selecting 'Open' under the 'File' menu. Select the appropriate .pclx file and then select 'Open'. Downloading large configuration files can take up to a few minutes. Be patient and acknowledge any messages PCLink shows.

1.6.3 MAP Sensor Calibration

At key on and engine not running the Manifold Absolute Pressure (MAP) Sensor should always match the Barometric Absolute Pressure (BAP) Sensor. As well as providing altitude correction, the BAP sensor also allows the MAP sensor to be calibrated prior to tuning.

Link G4X ECUs use an on-board barometric sensor that is calibrated prior to dispatch. This ensures that all PCLink tune files (pclx Files for G4X or pcl5 for G5) give a consistent state of tune throughout the ECU range. This allows a tune file to be transferred between G4X based ECUs giving an equivalent state of tune providing all factors affecting volumetric efficiency are equal.

Without the ability to calibrate all the available types of MAP Sensors to the BAP Sensor there would be significant affects on the accuracy of the resulting tune, especially when tuning with Manifold Gauge Pressure (MGP) as a load index.

To calibrate the MAP sensor:

1. Connect a laptop/notebook PC to the ECU and connect to the ECU using PCLink.
2. Under the Analog Channels menu, select the An Volt channel that has been wired to the MAP sensor. Select the correct MAP Sensor Type.
3. Under the 'Options' menu, select 'MAP sensor calibration'.
4. Follow the on screen instructions.
5. Select the 'Analog Inputs' tab in the runtime values section of PCLink (lower part of the screen).
6. Compare the MAP and BAP values and ensure they have a similar reading (within 1 kPa).
7. Perform a 'Store' by pressing F4.

A more in depth explanation is provided in the PCLink help Manual under PCLink G5 Users Manual -> Tuning Operating Procedures -> ECU Controls -> MAP Sensor Calibration.

1.6.4 TPS Calibration

Non E-Throttle Vehicles:

The Throttle Position Sensor (TPS) is used by the ECU to calculate various engine management parameters used by functions such as idle speed control, acceleration enrichment and motor sport features. It is important that the ECU knows when the throttle is open and closed (or part way in between). The following procedure calibrates the ECU to match the TPS and is for engines using a cable driven throttle:

1. Connect a laptop/notebook PC to the ECU and connect to the ECU using PCLink.
2. Open Analog Inputs -> Throttle Position Sensor and ensure that the TPS (Main) Source is set to the correct input. Refer to the Pinouts section of this manual for details.
3. Under the 'Options' menu, select 'TPS calibration'.
4. Follow the on screen instructions.
5. Select the 'General' tab in the runtime values section of PCLink (lower part of the screen).
6. Ensure the Throttle Position value reads 0% when the throttle is closed and 100% when fully open.
7. Perform a 'Store' by pressing F4.

1.6.5 R34 GTR Multi Function Display Setup

The Nissan Skyline GTR (R34) contains a MFD (Multi Function Display). The MFD displays data from the ECU including throttle position.

For the MFD to display throttle position correctly the following steps need to be followed.

1. Calibrate the throttle position in the ECU using PCLink. See the TPS Calibration section of this manual for further details. Store to the ECU (F4 key).

2. Turn the ignition switch off.
3. Press and hold the Return and Mode buttons on the MFD at the same time. Turn on the ignition switch.
4. Wait until the GT-R logo is displayed then release the Return and Mode buttons.
5. Quickly press the joystick button five times. This needs to be done before the GT-R logo disappears. The MFD throttle calibration is now accessible.
6. A screen will be displayed that shows some Japanese characters. Remove your foot from the accelerator pedal. Press the joystick button.
7. Fully open the throttle by applying your foot to the accelerator pedal. Press the joystick button.
8. A screen will now be displayed that shows throttle position. Verify that the throttle position reads all the way from 0% to 100%.
9. Turn the ignition switch off, wait five seconds, and then turn the ignition switch on. Verify that PCLink and the MFD display the same throttle position value.

1.6.6 IAT Sensor Selection

This section only applies when an Intake Air Temperature (IAT) sensor has been wired and fitted to the intake system. It is important that the ECU is calibrated to match the sensor installed in the engine. This procedure is as simple as selecting the correct sensor type as follows:

1. Connect a laptop/notebook PC to the ECU and connect to the ECU using PCLink.
2. Click on 'Analog Channel' in the configuration tree.
3. Select the An Temp channel the sensor has been wired to.
4. Ensure that channel (and only that channel) is set to 'Inlet Air Temperature'.
5. Select the correct 'Temp Sensor Type'.
6. Select the 'Analog Inputs' tab in the runtime values section of PCLink (lower part of the screen).
7. Ensure that IAT reads the correct temperature.
8. Perform a 'Store' by pressing F4.

1.6.7 Input and Output Setup

As the Link G4X Plug-In ECUs are often designed to run several models there are a few items that must be set-up to make the ECU specific to your model.

The Pinouts section of this manual gives a list of the functions of each channel based on the target vehicle. It is the tuners responsibility to make sure that the following channels are set-up correctly for the vehicle model the ECU is fitted to:

All Auxiliary Output Channels

Use the 'Test On' or 'Test PWM' (at 10 Hz) functions to test the wiring of channels.

All Digital Inputs

Look at the Digital Inputs runtime values (lower section of the PCLink screen) to confirm each channels operation.

All Analog Volt and Temperature Inputs

Look at the Analog Inputs runtime values (lower section of the PCLink screen) to confirm each channels operation.

1.6.8 Trigger Calibration

The following instructions assume that all pre-start set-up instructions given in previous sections have been completed. Only after all pre-start checks have been made should an attempt be made to crank the engine. The following steps must be performed before an attempt is made to start the engine to ensure the G4X ECU is calibrated to precisely measure engine position.

1. Connect the ECU to PCLink.
2. Select 'Fuel', then 'Fuel Set-up':
 - a. Set 'Injection Mode' to OFF. This will prevent the engine from trying to start while the triggers are calibrated.
 - b. Perform a Store (press F4) to make sure fuelling is not re-enabled if power to the ECU is lost.
3. Click on 'Triggers' then 'Calibrate Triggers'.
4. Perform the correct trigger calibration procedure specific to your vehicle as described in the PCLink help (Press F1).

Note that trigger calibration must be performed again once the engine is running. Due to the acceleration and deceleration of the crankshaft at low speeds, an inaccurate measurement of engine timing is usually made. Also it is often harder to see timing marks with a timing light at slow engine speeds. Trigger calibration should

be checked again at between 2000-4000 RPM where engine speed is stable and a more consistent timing reading can be obtained.

A more in depth explanation is provided in the PCLink help Manual under G4X ECU Tuning Functions -> Triggers -> Calibration.

1.7 First Time Startup

For further help on any of the settings discussed below, consult the Help in PCLink Tuning Software. Help can be invoked by pressing F1, or right clicking any item and selecting 'What's this?'.

Pre-set-up Checks

Before attempting to configure the ECU, ensure the following tasks have been completed:

1. Ensure the ECU and all associated components are connected and correctly wired/installed.
2. Fully charge the vehicle's battery, as the engine will be required to be cranked during the set-up procedure.
3. Check all oil and water levels are correct.

Connecting to PCLink Tuning Software

Use the following procedure to establish a connection between your Link ECU and PCLink Tuning Software tuning software.

1. Make sure your laptop battery is fully charged or plugged in to mains power.
2. Connect the ECU to your laptop and connect to PCLink as described in the 'Communicating with your ECU' section of this manual.

First Time Startup

After performing all set-up instructions given in previous sections, including trigger calibration, the engine is now ready to be started. The following procedure should be used for first time start-up.

1. Turn the ignition key OFF then ON. The fuel pump should prime momentarily upon power up.
2. Connect the ECU to PCLink.
3. Access the runtimes values by pressing the F12 Key, click the 'Analog' tab:
 - a. TPS – spans from 0 to 100% when throttle is pressed. If not, perform a TPS Calibration. If the vehicle has an E-Throttle confirm that APS (Sub), APS (Main), TPS (Sub), TPS (Main) all operate correctly and that the throttle blade tracks the target correctly.
 - b. MAP – should read approx 101 kPa (at sea level) with the engine not running. If not, check the MAP Sensor Type setting and perform a MAP Calibration.
 - c. ECT – should read current engine temperature.
 - d. IAT – should read current intake air temperature.
 - e. Digital Inputs (click the 'Digital' tab) – Operate switches connected to any digital inputs while watching the runtime value to ensure they operate as expected.
4. Rectify any faults found in Step 3.
5. Ensure the basic Fuelling setup is correct.
 - a. If using Traditional Fuel Equation Mode then locate the 'Master Fuel' setting in the ECU Settings Menu under: *Fuel > Fuel Setup > Fuel Main*. This will need to be adjusted during or just after start-up.
 - b. If using one of the Modelled Fuel Equation Modes then navigate to *Fuel > Fuel Setup > Fuel main* and enter the correct engine capacity, correct base fuel pressure, and correct fuel properties. Navigate to *>Fuel>Fuel Setup>Injector Setup*, enter correct injector flow rate and rated pressure.
6. Crank the engine until it starts. Some throttle may be required for first time start-up due to imperfect tuning.
 - a. If using Traditional Fuel Equation Mode the Master Fuel setting can be used to enrich/lean the engine (increase to enrich).
 - b. If using one of the Modelled Fuel Equation Modes the Injector Flow Rate can be decreased to add more fuel, this will need to be changed back to the correct value later but works well for first start purposes.
7. If the engine fails to start after several attempts, do not crank it endlessly. Stop and determine the problem before continuing.
8. Check the Trigger Error Counter (found under the Triggers runtime values tab). If this value increases during cranking/running then there is a trigger setup fault. It is not unusual for this number to count one or two on the first engine revolution.

9. Once the engine starts:
 - a. If using Traditional Fuel Equation Mode adjust the Master Fuel setting to achieve best possible running
 - b. If using one of the Modelled Fuel Equation Modes adjust the Injector Flow Rate setting to achieve best possible running, this will need to be changed back to the correct value later but works well for first start purposes.
10. The engine should now be allowed to fully warm up. It may be necessary to readjust 'Master' several times to maintain smooth running. Don't forget to keep an eye on engine temperature.
11. Once the engine is warmed up and running well, perform another trigger calibration (known "as setting the base timing").
12. Perform a Store by pressing F4.

Essential Tuning Adjustments

It is assumed that at this stage all set-up procedures described in previous sections have been completed and the engine is running. The following steps detail correct set-up procedures for some of the more critical ECU parameters (note that MAP Sensor Calibration should have already been completed by now):

Injector Voltage (Dead-time) Correction

There is always a delay between the injector being energised and the injector actually opening. Likewise, there is a small delay between the injector being de-energised and the injector closing. The opening time is considerably longer than the closing time, however the overall result is that less fuel will flow for a given pulse width than would be expected with an 'ideal injector'. To compensate for this the injector pulse widths are increased to compensate for this 'dead-time'. The dead-time for a given injector is a function of the battery voltage, differential fuel pressure and the type of injector driver (saturated or peak and hold). A typical dead-time at 3 Bar differential fuel pressure and 14 volts is just under 1ms (ms = millisecond = 1 thousandth of a second).

In applications with a linear 1:1 fuel pressure regulator (i.e. not a rising rate regulator), the differential fuel pressure (difference between manifold pressure and fuel pressure) will be constant. Therefore the only variable that is changing will be the battery voltage (this changes with electrical load and sometimes engine speed). Without correction, the changes in dead-time will cause the engine to run lean when the voltage drops. If the Injector Voltage Correction is properly set-up then changes in the battery voltage will not affect the air/fuel ratio.

The injector dead-time table allows the dead-time for different battery voltages to be entered. The values represent the dead-time in milliseconds. These should increase with falling system voltage.

Injector dead-time for a particular set of injectors can be determined using a flow bench or on a running engine.

To determine the injector dead-time using a flow bench, the injectors need to be operated at the intended operating pressure (normally three bar) and at a constant duty cycle as well as a set voltage. Vary the supply voltage to the injector and measure minimum pulse width at which the injectors will flow for a particular voltage. This is the required dead-time for that injector at that tested voltage.

To determine injector dead-time on a running engine, with the engine fully warmed and operating at stable air/fuel ratios (a very precise AFR meter is required – a narrow band O2 sensor will not suffice), electrical drain needs to be applied to the system; the preferred method is disconnecting the alternator main fuse. Battery load testers are also useful here too.

Watching the air fuel ratios change while the battery voltage drops, the dead-time table can be trimmed to maintain the same stable air/fuel ratio. Injector dead-time can be viewed as a row graph. A smooth curve needs to be maintained at all times.

NOTE: any change to the fuel pressure or injectors will require a recalibration of the injector dead-times.


Traditional Fuel Equation Mode Master Fuel Setting

If using Traditional Fuel Equation mode the Master Fuel setting should be set so that the numbers in the middle of the fuel table end up around a value of 50. This is to allow sufficient span of the numbers in the main fuel table.

1.8 Pinouts

Pin information is provided to assist when troubleshooting. All pinouts are looking into the ECU (wire side).

1.8.1 GTRLink

101	102	103	104	105	106	107	108	1	2	3	4	5	6	7	8	9	10		21	22	23	24	25	26	27	28	29	30	41	42	43	44	45	46	47	48	49	50
109	110	111	112	113	114	115	116	11	12	13	14	15	16	17	18	19	20		31	32	33	34	35	36	37	38	39	40	51	52	53	54	55	56	57	58	59	60

Bottom Board V1.8 Onwards

Pin	ECU Pin	Function	Pin	ECU Pin	Function
101	Injector 1	Injection	32	Aux 7	CE Light
102	nc		33	nc	
103	Injector 3	Injection	34	Ground (AFM Front)	(GTR Only)
104	Aux 2	FP Speed 1	35	An Volt 5	AFM Signal (Front) (GTR Only)
105	Injector 2	Injection	36	An Temp 2	Factory IAT (GTR Only)
106	Aux 1	FP Speed 2 (GTR Only)	37	nc	
107	Ground		38	An Volt 3	TPS (Main)
108	Ground		39	nc	
109	nc (+12V from ECCS Relay)		40	nc	
110	Injector 5	Injection	41	Trig 2	swapped via switch
111	nc		42	Trig 1	swapped via switch
112	Injector 6	Injection	43	DI 2	Start Signal
113	Aux 1	VTC Cam Solenoid (S2 RB25)	44	DI 8	Neutral Switch
114	Injector 4	Injection	45	12V Ignition Switch Input	Controls Pin 16
115	Ground (O2 Heater)		46	DI 4	A/C In
116	Ground		47	nc	
			48	+5V Out	
1	Ignition 1	Ignition	49	+14V ECCS Relay	ECU Power
2	Ignition 5	Ignition	50	Ground (Signal)	
3	Ignition 3	Ignition	51	Trig 2	swapped via switch
4	Injector 7 (Aux)	ISC Solenoid	52	Trig 1	swapped via switch
5	nc		53	DI 3	Vehicle Speed
6	Injector 8 (Aux)	Fan Relay (GTR Only)	54	DI 7	Idle Switch
7	Aux 4	Tacho	55	An Volt 9	Oxy Signal (Rear) (GTR Only)
8	Ignition Switch Input (R34 Euro)	Controls Pin 16	56	TPS Out	Required by 4wd system
9	Ignition 8 (Aux)	A/C Out	57	+5V Out (TPS Idle Sw)	
10	Ground		58	+12V constant	ISC Flywheeling
11	Ignition 6	Ignition	59	+14V ECCS Relay	ECU Power
12	Ignition 2	Ignition	60	Ground (Signal)	
13	Ignition 4	Ignition			

Pin	ECU Pin	Function	Pin	ECU Pin	Function
14	nc		On Board MAP	An Volt 1	MAP
15	nc		E-Throttle Relay	Aux 12	
16	ECCS Relay Control	Pulls to ground when Ign is on	Expansion 1	Ground (Signal)	
17	Injector 1	R34 GTR Trip Computer Tacho	Expansion 2	+5V Out	
18	Aux 6	FP Relay	Expansion 3	An Volt 7	
19	DI 1	Power Steer Switch	Expansion 4	An Volt 11	
20	Ground		Expansion 5	An Volt 10	
21	nc		Expansion 6	An Volt 8	
22	nc		Expansion 7	Aux 10	
23	Knock 1	Knock	Expansion 8	Aux 9	
24	Knock 2	Knock	Expansion 9	Ground (Signal)	
25	Aux 8	WG Solenoid (GTR and RB25DET)	Expansion 10	+5V Out	
26	Ground (AFM)		Expansion 11	Aux 3	
27	An Volt 4	AFM Signal (GTR Rear)	Expansion 12	DI 5	
28	An Temp 1	ECT	Expansion 13	DI 6	
29	An Volt 6	Oxy Signal (Front)	Expansion 14	An Volt 12	
30	Ground (Signal)		Expansion 15	An Temp 3	
31	nc		Expansion 16	An Temp 4	

Bottom Board V1.7 and Earlier

Pin	ECU Pin	Function	Pin	ECU Pin	Function
101	Injector 1	Injection	31	nc	
102	nc		32	Aux 7	CE Light
103	Injector 3	Injection	33	nc	
104	Aux 2	FP Speed 1	34	Ground (AFM Front)	(GTR Only)
105	Injector 2	Injection	35	An Volt 5	AFM Signal (Front) (GTR Only)
106	Aux 1	FP Speed 2 (GTR Only)	36	An Temp 2	Factory IAT (GTR Only)

Pin	ECU Pin	Function	Pin	ECU Pin	Function
107	Ground		37	nc	
108	Ground		38	An Volt 3	TPS (Main)
109	nc (+12V from ECCS Relay)		39	nc	
110	Injector 5	Injection	40	nc	
111	nc		41	Trig 2	swapped via switch
112	Injector 6	Injection	42	Trig 1	swapped via switch
113	Aux 1	VTC Cam Solenoid (S2 RB25)	43	DI 2	Start Signal
114	Injector 4	Injection	44	DI 8	Neutral Switch
115	Ground (O2 Heater)		45	12V Ignition Switch Input	Controls Pin 16
116	Ground		46	DI 4	A/C In
			47	nc	
1	Ignition 1	Ignition	48	+5V Out	
2	Ignition 5	Ignition	49	+14V ECCS Relay	ECU Power
3	Ignition 3	Ignition	50	Ground (Signal)	
4	Injector 7 (Aux)	ISC Solenoid	51	Trig 2	swapped via switch
5	nc		52	Trig 1	swapped via switch
6	Injector 8 (Aux)	Fan Relay (GTR Only)	53	DI 3	Vehicle Speed
7	Aux 4	Tacho	54	DI 7	Idle Switch
8	Ignition Switch Input (R34 Euro)	Controls Pin 16	55	An Volt 9	Oxy Signal (Rear) (GTR Only)
9	Aux 3	A/C Out	56	TPS Out	Required by 4wd system
10	Ground		57	+5V Out (TPS Idle Sw)	
11	Ignition 6	Ignition	58	+12V constant	ISC Flywheeling
12	Ignition 2	Ignition	59	+14V ECCS Relay	ECU Power
13	Ignition 4	Ignition	60	Ground (Signal)	
14	nc		On Board MAP	An Volt 1	MAP
15	nc		Expansion 1	Ground (Signal)	
16	ECCS Relay Control	Pulls to ground when Ign is on	Expansion 2	+5V Out	
17	Injector 1	R34 GTR Trip Computer Tacho	Expansion 3	DI 5	
18	Aux 6	FP Relay	Expansion 4	DI 6	
19	DI 1	Power Steer Switch	Expansion 5	An Volt 8	
20	Ground		Expansion 6	An Volt 2	

Pin	ECU Pin	Function	Pin	ECU Pin	Function
21	nc		Expansion 7	An Temp 3	
22	nc		Expansion 8	An Temp 4	
23	Knock 1	Knock	Expansion 9	Ground (Signal)	
24	Knock 2	Knock	Expansion 10	+5V Out	
25	Aux 8	WG Solenoid (GTR and RB25DET)	Expansion 11	Ignition 7	
26	Ground (AFM)		Expansion 12	Ignition 8	
27	An Volt 4	AFM Signal (GTR Rear)	Expansion 13	DI 9	
28	An Temp 1	ECT	Expansion 14	DI 10	
29	An Volt 6	Oxy Signal (Front)	Expansion 15	An Volt 10	
30	Ground (Signal)		Expansion 16	Aux 11	

Note: RB20DE and RB20DET Looms have Injector 4 and 6 swapped around, this can be corrected at the ECU header or the injector sub loom plug.

Note: Aux 1 is exposed on two pins (106 & 113) and has a different function depending on the vehicle.

Note: Injector 7 (Aux) has a diode to 12V fitted to it and so isn't suitable for injector control.

1.9 CAN Information

The following CAN (Controller Area Network) information is provided:

1.9.1 GTRLink

The G4X GTRLink Plug-in ECU has two CAN buses. These CAN buses exist to support aftermarket CAN devices.

CAN Connectors Bottom Board V1.8 Onwards

CAN bus 1 and 2 each use a 4 pin connector with the same pinout as shown below.

CAN Connector		
Pin	Function	Colour
1	GND	Brown
2	CAN L	Green
3	CAN H	White
4	+14V	Yellow

CAN Connectors Pre Bottom Board V1.8

CAN bus 1 uses a 5 pin connector and is labeled on the ECU as 'CAN 1/RS232'.

If using this connector for CAN ensure the cable being used doesn't have Serial wires connected as this can act as an aerial and prevent USB communications from working.

CAN 1/RS232 Connector

Pin	Function	Colour
1	Comms GND	Brown
2	CAN1 L	Green
3	CAN1 H	White
4	RS232-RX	Grey
5	RS232-TX	Yellow

CAN bus 2 uses a 5 pin connector and is labeled on the ECU as 'CAN 2/OBD'.

CAN 2/OBD Connector		
Pin	Function	Colour
1	GND	Brown
2	CAN2 L	Green
3	CAN2 H	White
4	NC	Grey
5	+14V	Yellow

To learn more about CAN see PCLink help.

1.10 Known Issues

All plug-in ECUs are fully tested on a range of relevant vehicles, although there are often variations that have not been tested. For this reason issues can arise.

WARNING: Always download the latest Installation Manual from linkecu.com and check the latest status of known issues before installing the ECU.

Please contact your nearest Link dealer when suspecting a compatibility issue.

1.10.1 GTRLink

Current known issues with the G4X GTRLink Plug-In ECU:

- On some GTR and 4WD models a warning light may be displayed on the dash. This may be due to the value of the ECUs TPS Out signal level being too low. A solution to this is to slightly rotate the TPS to increase the closed throttle voltage. Remember to do a TPS cal after moving the TPS.
- TPS Idle Switch Powered From +5V. This is NOT an issue on manual transmission models. Some automatic transmission models require the TPS switch to be powered from 12V. This can be achieved by removing the wire from pin 57 (Idle Switch Power) and joining it to the wire from pin 59 (ECU Power).
- +5V Short – There has been a report of situation where the 5V supply was dragged down due to a short on the 5V supply. This was resolved by removing the wire from pin 57.
- Back Feeding on R34 (Pre V1.8 Bottom Board Only) – On R34 GTR models the A/C relay is hot fed. This will cause a back feed that will drain the battery. The power supply to the A/C relay must be changed to an ignition switched source or Aux 3 (pin 9) disconnected from the ECU. It is possible to use the power supply to the injector ballast resistors as the feed for the A/C relays coil.
- On some R34 GTRs the Air conditioning input (DI 4) may need to have its state changed to low side and pull-up resistor to on.
- On factory RB20DET Looms Injector 4 and 6 pins are swapped, this can be fixed by swapping their respective pins either at the ecu header or the injector sub loom connector.

The Nissan 360 Opto sensor is known to be susceptible to trigger issues at particularly high RPM and in engines with aftermarket camshafts and/or valve springs due to the design and location of the factory trigger sensor. These trigger issues can present as misfires or as what feels like a lower-than-expected rpm limit.

- The most common way to prevent trigger issues as a result of the factory sensor is to change to an aftermarket trigger disk within the factory sensor or an aftermarket trigger sensor setup on the cam.
- The best solution to trigger issues on vehicles that use the 360opto style sensor is to go to a crank trigger setup with a cam sync but this is often a reasonably expensive and more technically difficult process.
- If you wish to retain the factory sensor you can minimise the chance of trigger issues by removing as much play as possible between the crank, cam and sensor. A new O-ring on the sensor shaft, ensuring there is minimal play in the sensor to cam spline, making sure cambelt tension has been set correctly (maybe a new tensioner), ensuring the cambelt is OEM or a very high quality replacement and not excessively worn or stretched all help to reduce the chance of trigger issues occurring. A brand new CAS normally rectifies the problem but this can be expensive and possibly a difficult item to acquire.