

G5 VOODOO NEO

LED CODES

LED 1 (Left) – Power and Fault Codes

SOLID BLUE

ECU powered, no faults.

FLASHING BLUE

ECU Fault Codes, long 10s method.

FLASHING RED

No connection between Communication board and ECU, this is typically seen when performing a Firmware Upgrade. If this occurs outside of doing a firmware update then doing a firmware update with the latest Link Firmware Package file should fix this.

SOLID RED

Communication board or ECU in boot mode.

LED 2 (Center) – Wi-Fi/USB Connection status

OFF

No USB or Ethernet cables connected and Wi-Fi is turned off.

SOLID BLUE

USB plugged in but PCLink not connected, no Ethernet plugged in and Wi-Fi is turned off.

SOLID PURPLE

Ethernet plugged in but PCLink not connected, no USB plugged in and Wi-Fi is turned off.

SOLID WHITE

Wi-Fi turned on but PCLink not connected, no USB or Ethernet plugged in.

CHANGING

There is more than one possible method of connecting to the ECU but PCLink is not connected yet.

COLOURS

* If BLUE is one of the colours then USB is plugged in.

* If PURPLE is one of the colours then Ethernet is plugged in.

* If WHITE is one of the colours then the Wi-Fi is turned on.

SOLID GREEN

PCLink Connected.

LED 3 (Right) – Logging/GPS Status

	GPS Off	GPS Enabled	GPS Locked	GPS Error
ECU Logging Off	LED Off	Flashing Blue	Solid Blue	Flashing Purple
ECU Logging Armed	Flashing Green	Flashing White	Alternating Blue/White	Flashing Purple
ECU Logging Running	Solid Green	Alternating Green/White	Solid White	Flashing Purple
ECU Logging Error	Flashing Yellow	Flashing Yellow	Flashing Yellow	Flashing Red